



# CUGNOT 100/133

Notice de montage  
Mounting instruction  
Montageanleitung

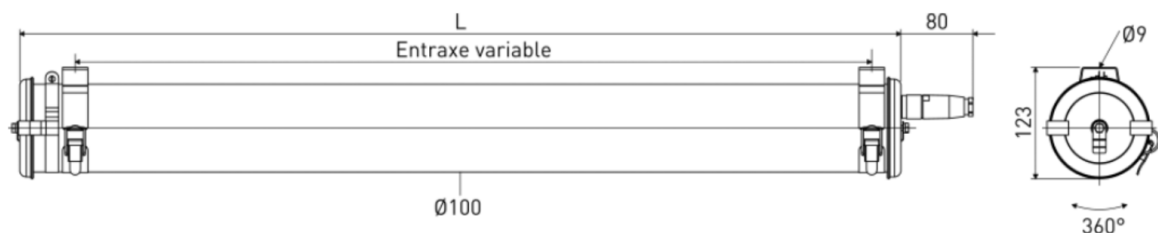

**Sammode**

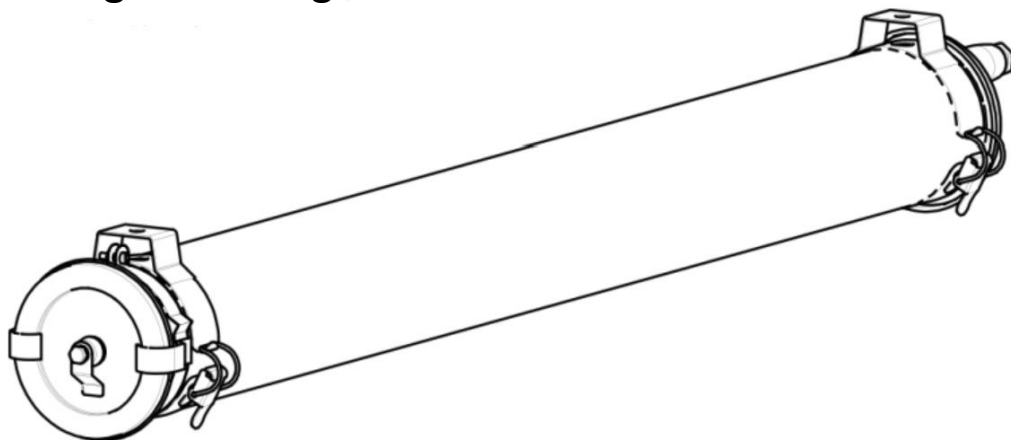


CUGNOT 100		
Type	L (mm)	Entraxe max (mm)
12H	697	611
13H	1007	911
14H	1307	1211
15H	1607	1511
16H	1850	1754

CUGNOT 133		
Type	L (mm)	Entraxe max (mm)
22H	737	833
23H	987	891
24H	1287	1191
25H	1587	1491
26H	1587	1754




**Ne pas ouvrir sous tension**  
**Do not open when energized**  
**Nicht unter Spannung öffnen**


# Installation & raccordement / Wiring / Verkabelung

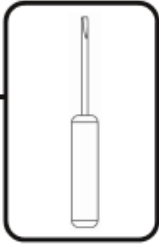


1.

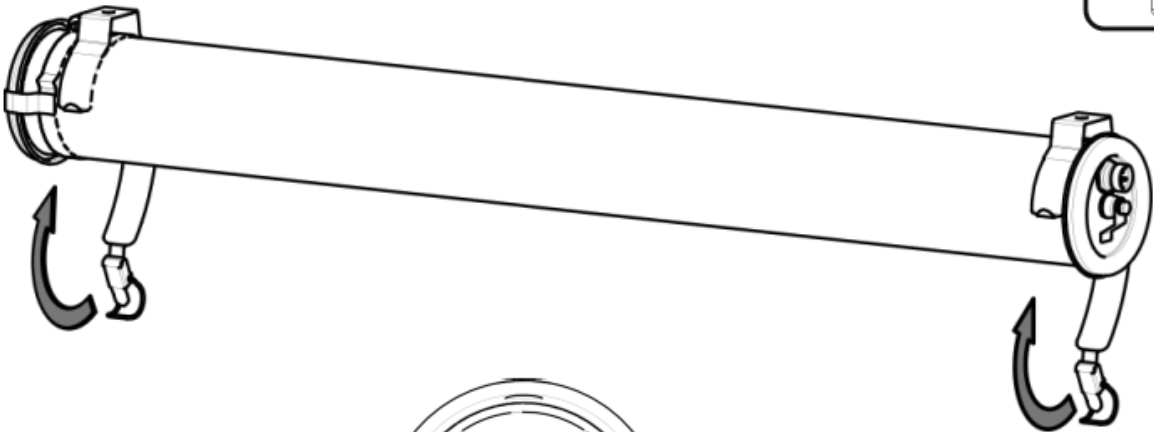


2.

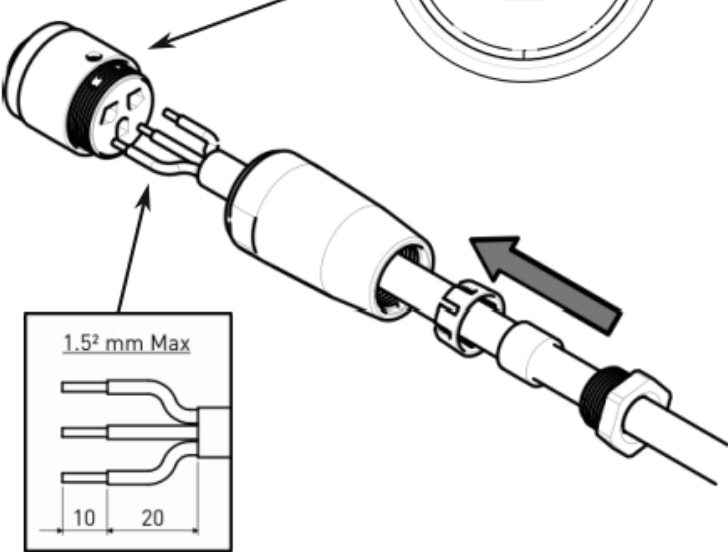

3.

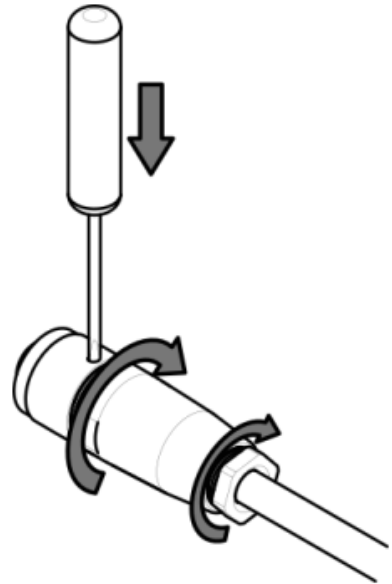


4.

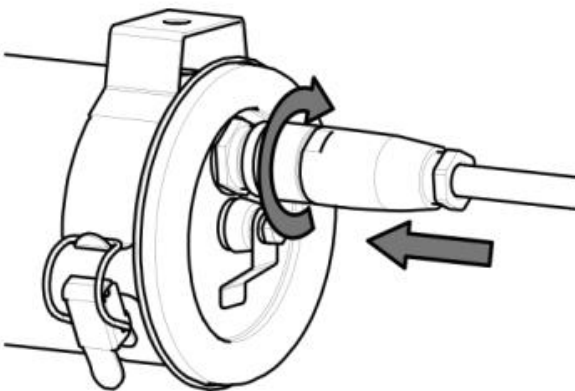




# Maintenance du module de LED


Remplacement of LED engine / Austausch der LED module

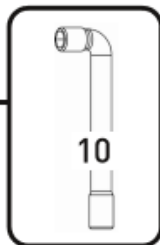


**!** Ne pas ouvrir sous tension  
Do not open when energized  
Nicht unter Spannung öffnen

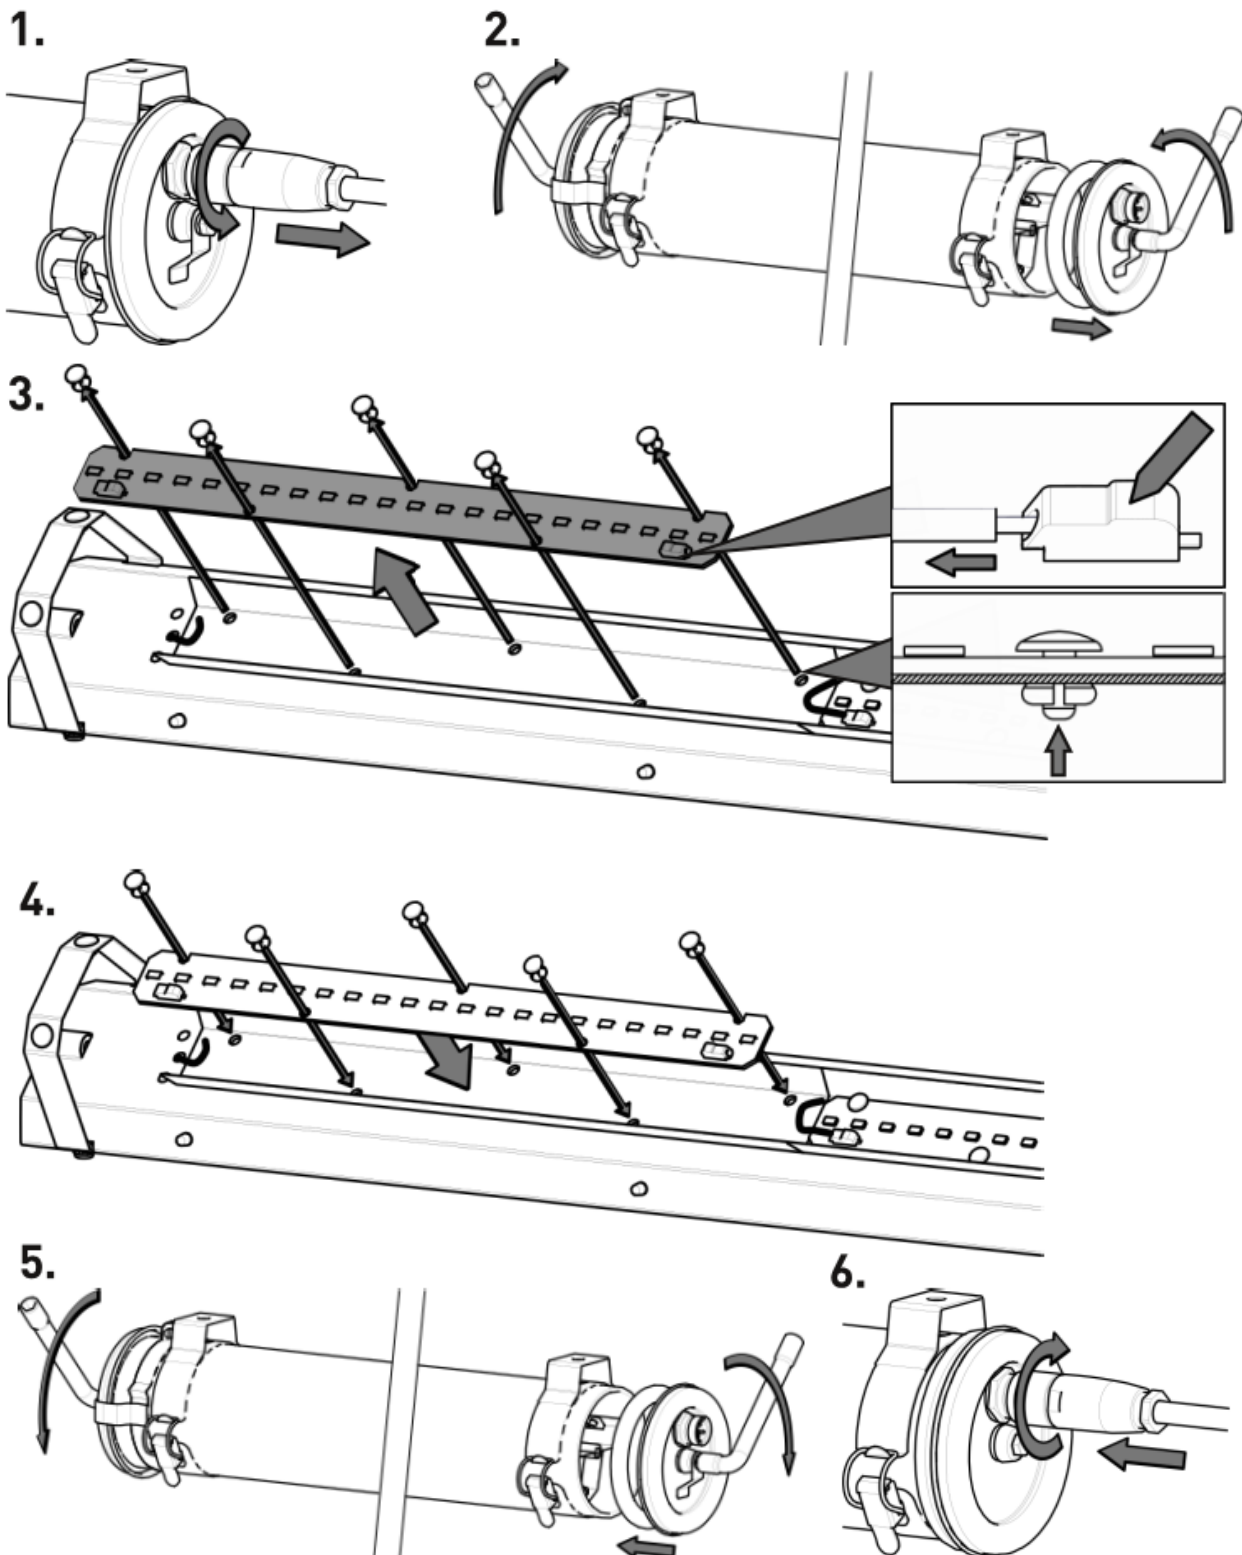

## 1. Position & câble / Position & cable / Position & kabel

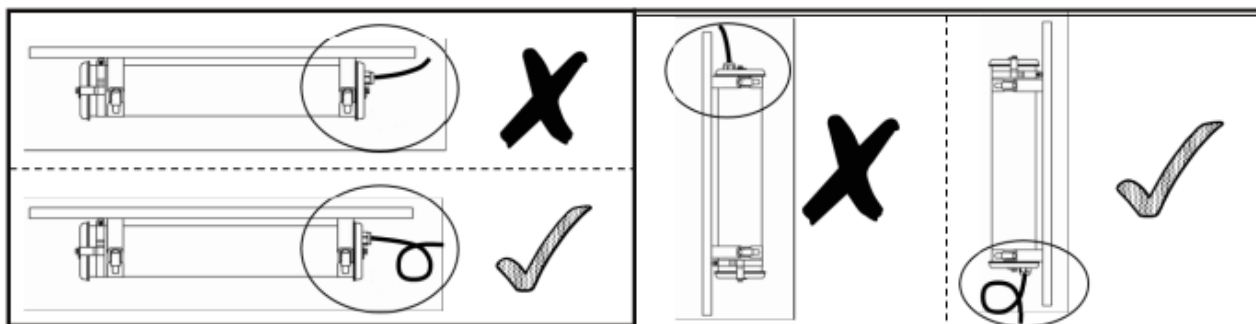

## 2. Flasques / End caps / Endkappen

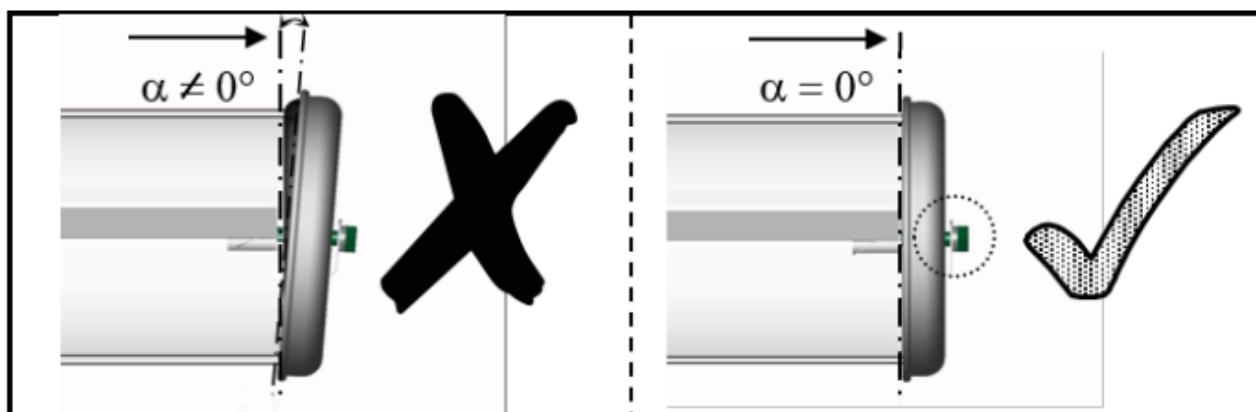

## 3. Vis centrale / Central screw / Zentrale schraube

