

the luminaire must be supplied by a SELV protected network



Sammode


Éclairage technique depuis 1927

FOUCAULT 70


Notice de montage

Mounting instruction


Montageanleitung

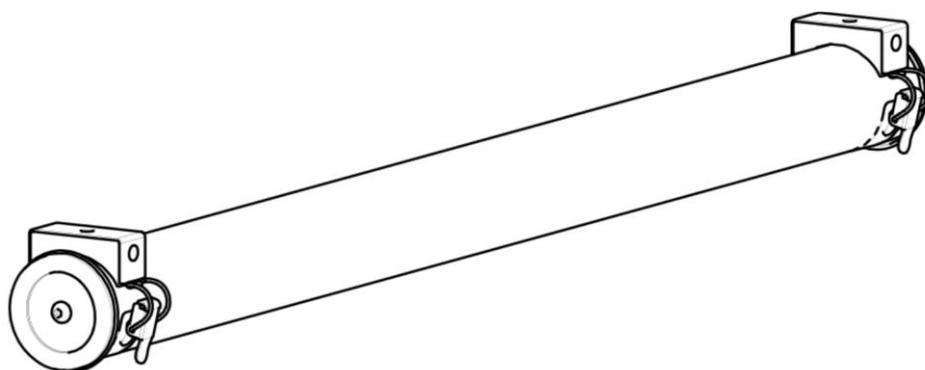

Ne pas ouvrir sous tension
Do not open when energized
Nicht unter Spannung öffnen

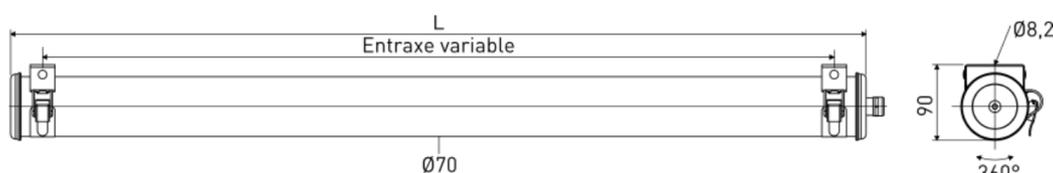


SI option :

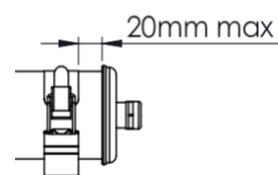

				SI option (sensor)		Poids (kg)
	Ø (mm)	L (mm)	Entraxe max (mm)	L (mm)	Entraxe max (mm)	
FOU70 450	70	430	370	515	455	1
FOU70 575	70	575	495	660	580	1
FOU70 700	70	715	635	800	720	1,3
FOU70 1000	70	995	915	1080	1000	1,7
FOU70 1300	70	1275	1195	1360	1280	2,3
FOU70 1600	70	1560	1480	1645	1565	3
FOU70 1850	70	1840	1760	1925	1845	3,7

24V Version : le luminaire doit être alimenté par un réseau protégé TBTS
/ The luminaire must be supplied by a SELV transformer


Installation & raccordement / Wiring / Verkabelung

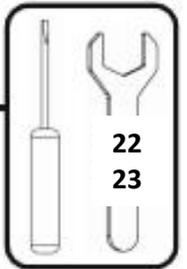


1.



2A max sur la ligne traversante
2A max on the through wiring

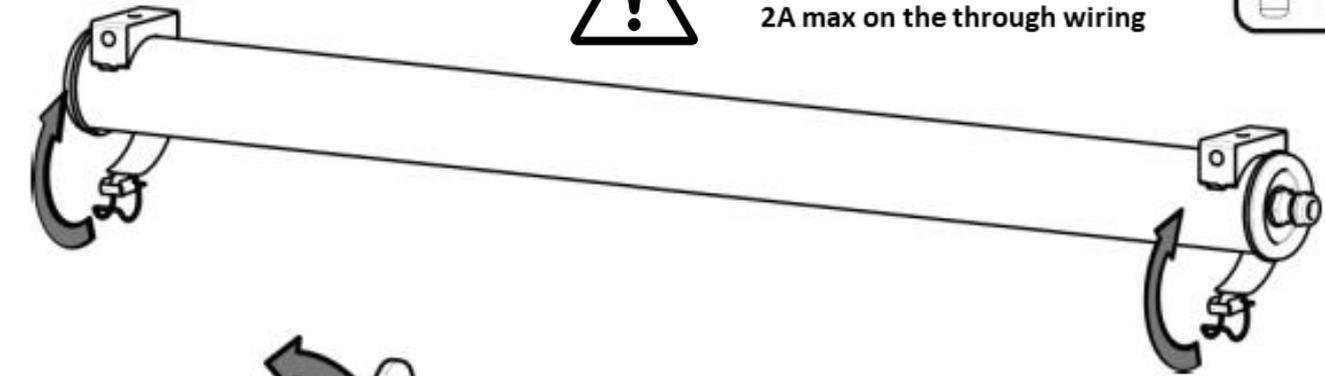


2.

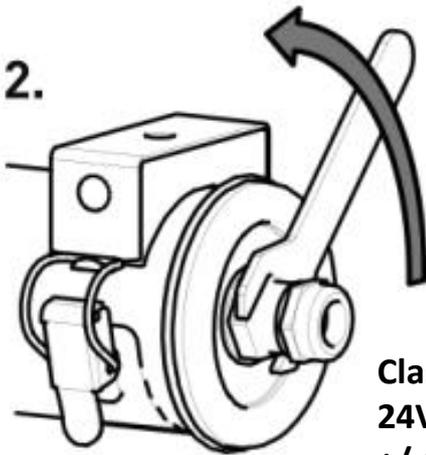


Class III
24V DC
+/-10%

Class I / II
220/240V
~50/60Hz


3.

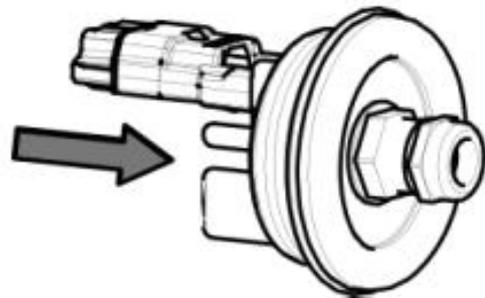

4.

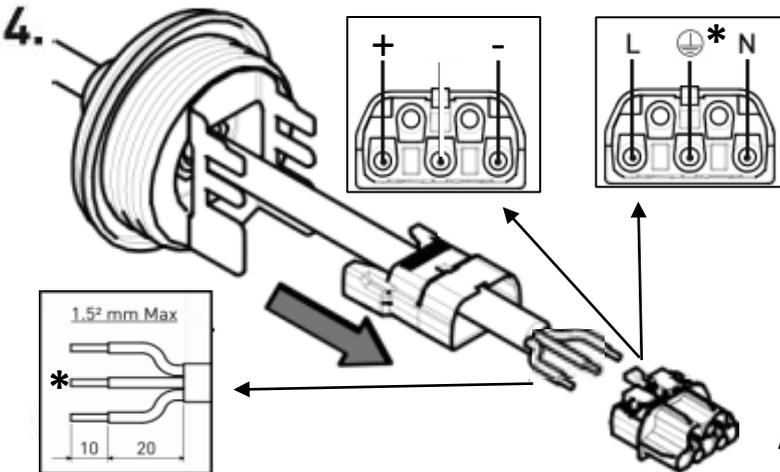


5.

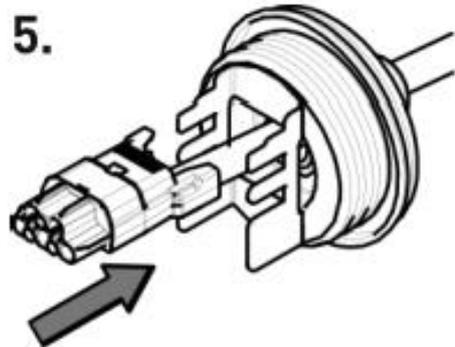


* Seulement pour la version classe I
/ Only for Class I version

6.

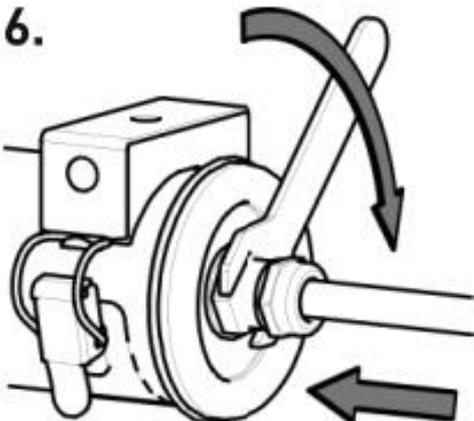

7.

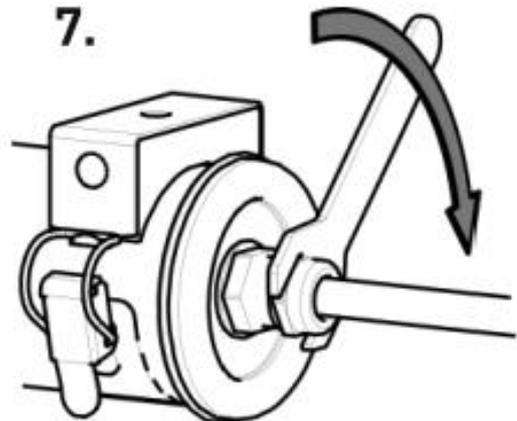


CAUTION









Maintenance du module de LED


Remplacement of LED engine / Austausch der LED module

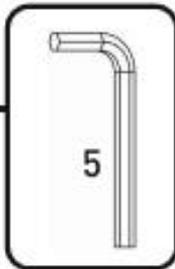


! Ne pas ouvrir sous tension
Do not open when energized
Nicht unter Spannung öffnen

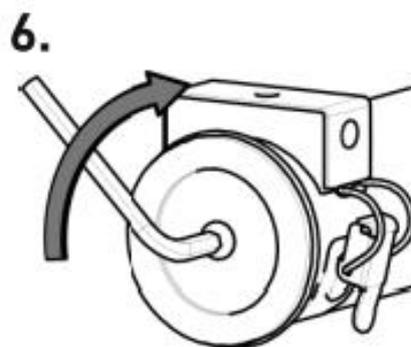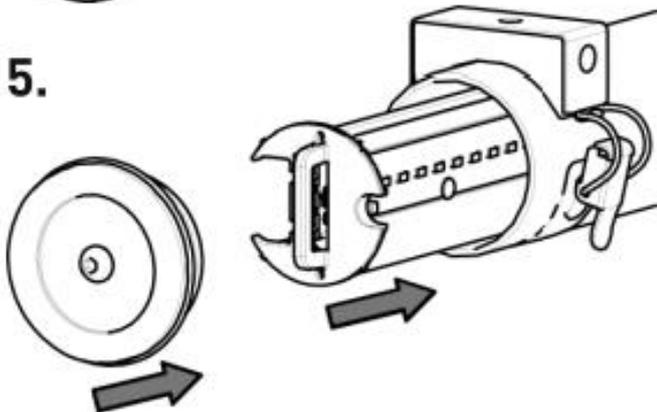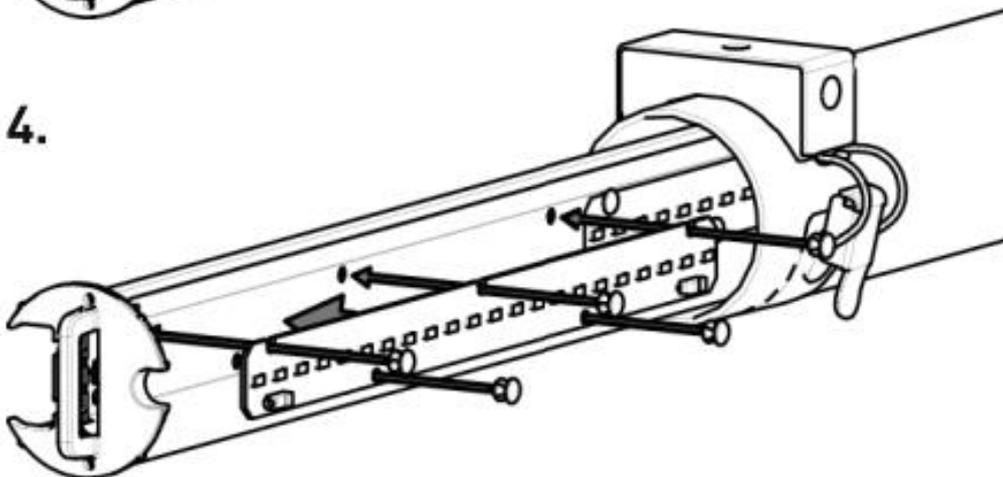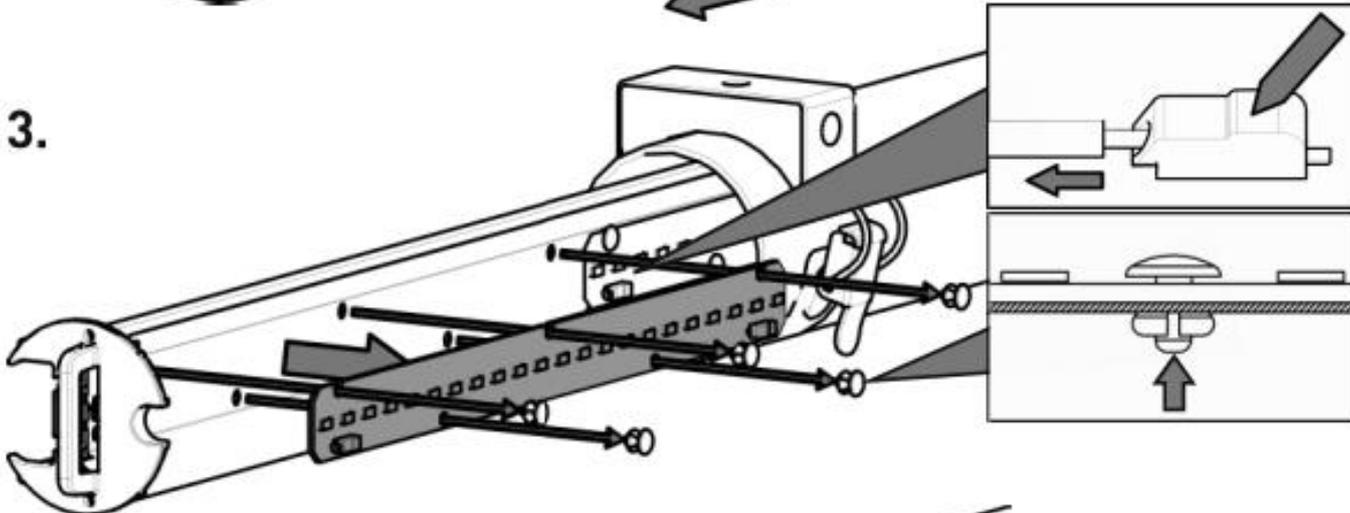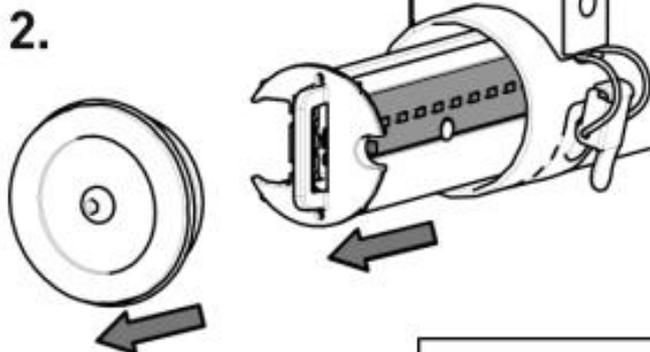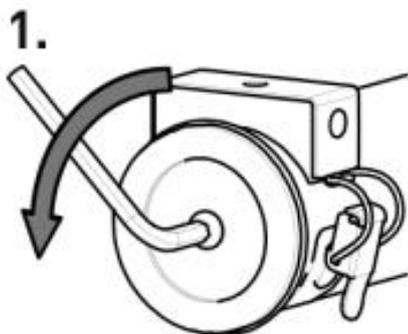

1. Position & câble / Position & cable / Position & kabel

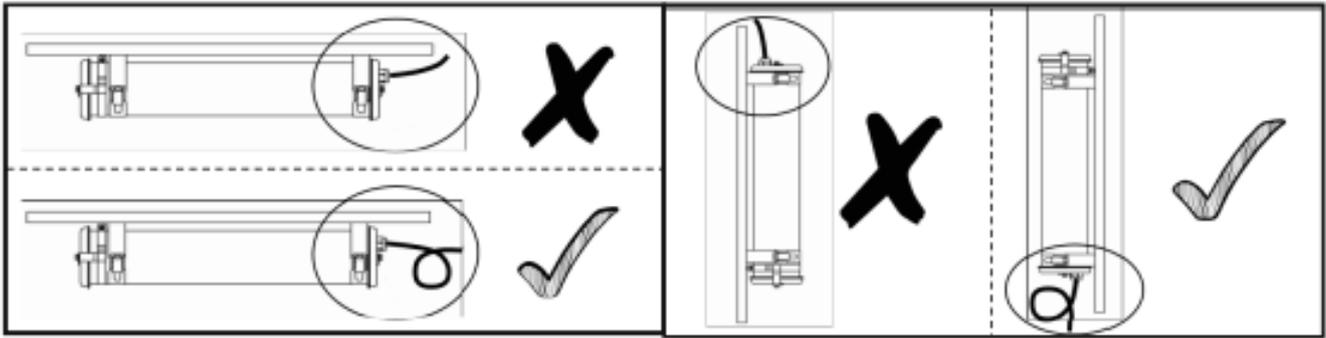

2. Flasques / End caps / Endkappen

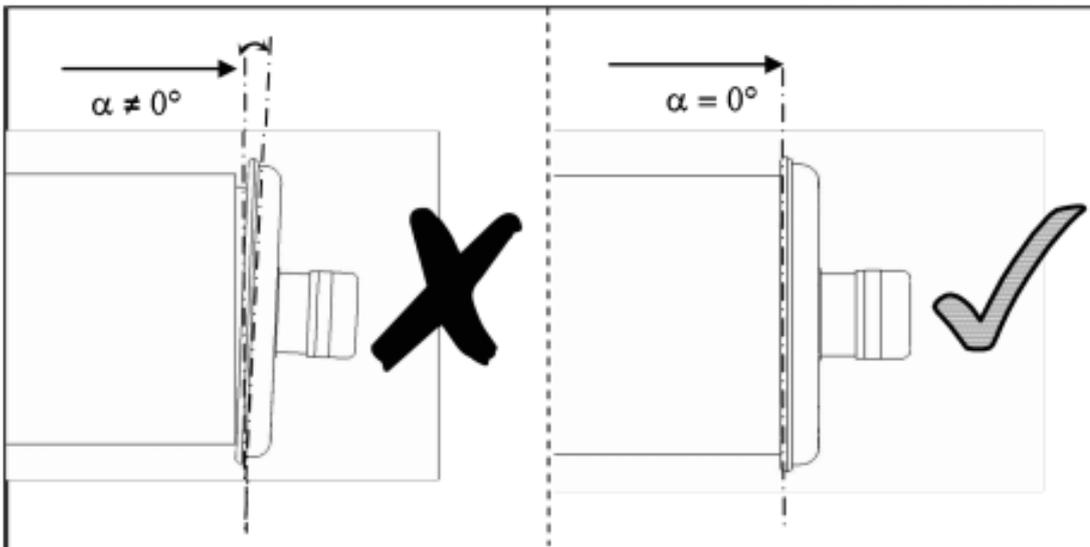

3. Vis centrale / Central screw / Zentrale schraube

